


ARCHITECTURAL PRODUCTS

Suggested Installation Instructions

For Chalkboard, Markerboard or Bulletin Board

Using L-Clips ■ Series 1200,1400,1600, 7500

Read completely before installing board

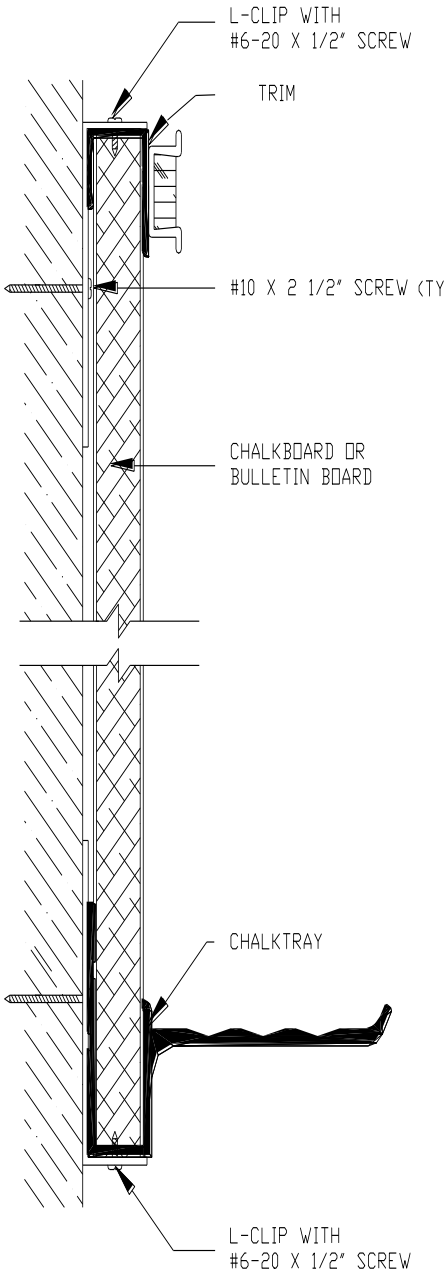

It is important that walls or plaster be completely dry before installing a board, as any moisture may cause the panel inserts to warp and void warranty.

Complete hanging hardware is included with each unit. If wall construction prevents the use of hardware as furnished, it is the responsibility of the customer to furnish the required fasteners.

Aluminum frame chalkboards and markerboards and both aluminum and wood frame bulletin boards are furnished with one (1) size L-Clip for use on both top and bottom of the frame.

Wood frame chalkboards and markerboards are furnished with two (2) sizes of L-Clips with the larger L-Clip at the bottom under the chalk/marker tray.

- (1) Determine the desired height from the floor to the bottom of the board, strike a line, and attach the proper L-Clip to the wall by drilling 1/8" holes stud construction or 1/4" holes for the expansion plug installation for masonry construction (*screws should be fastened into existing wall studs*). Make certain the bottom of the L-Clips are on the line when in the full down position. Place one L-Clip approximately 6" from each end and evenly space the others approximately 24" apart.
- (2) Set board on bottom L-Clips and mark a reference line on wall along top of board as guide for positioning the top L-Clips. Install the same as above. **NOTE:** *The L-Clips along the top of the board should be positioned so that when the board is in place, the short leg of the L-Clips can be tapped down on top of the frame.*
- (3) The manufacturer recommends the use of a quality construction adhesive to ensure the integrity of the installation. Apply two (2) golf ball size spots evenly spaced in height approximately 4' on center on the back of the board.
- (4) Set board on L-Clips, pressing board back firmly against wall at location of adhesive spots.
- (5) With all L-Clips firmly attached to the wall, insert the 6-20 x 1/2" drill and tap screws through holes in the short leg of the L-Clips into the frame of the board. Care should be taken to ensure that the L-Clip does not protrude beyond the face of the trim.