


# Retro-Fit Boards

## Installation Instructions

---

These boards are designed to fit over existing boards and should be ordered in the exact size of the board (including frame, but not tray) to be covered.

- 1) First, prepare the surface of the existing board by thoroughly cleaning it of dirt, dust or grease.
- 2) Apply construction adhesive to the back of the board in golf-ball size amounts in approximate positions as follows: every 16" in height and every 24" in length.  
(refer to drawing below for sample 4' x 8' size board)

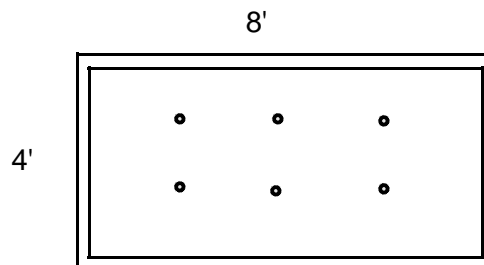

- 3) Position new board carefully over existing board and press firmly in the locations of the adhesive.
- 4) Install the self-tapping screws (supplied with the board) through the pre-drilled holes in the trim.
- 5) Clean the board thoroughly before using. (Refer to Pro-Rite<sup>®</sup> Markerboard Care & Maintenance Instructions.)

If you have any questions, call your local Marsh distributor or  
Contact Marsh directly at [vpsales@marsh-ind.com](mailto:vpsales@marsh-ind.com).