



RETRO-FIT BOARDS

This innovative board design offers a perfect solution for covering existing boards or when wanting to avoid the labor intensive alternative of adhering skins to the existing surface. Retro-Fit boards fit easily over previously installed framed boards without removing them. Installation can be done in minutes.

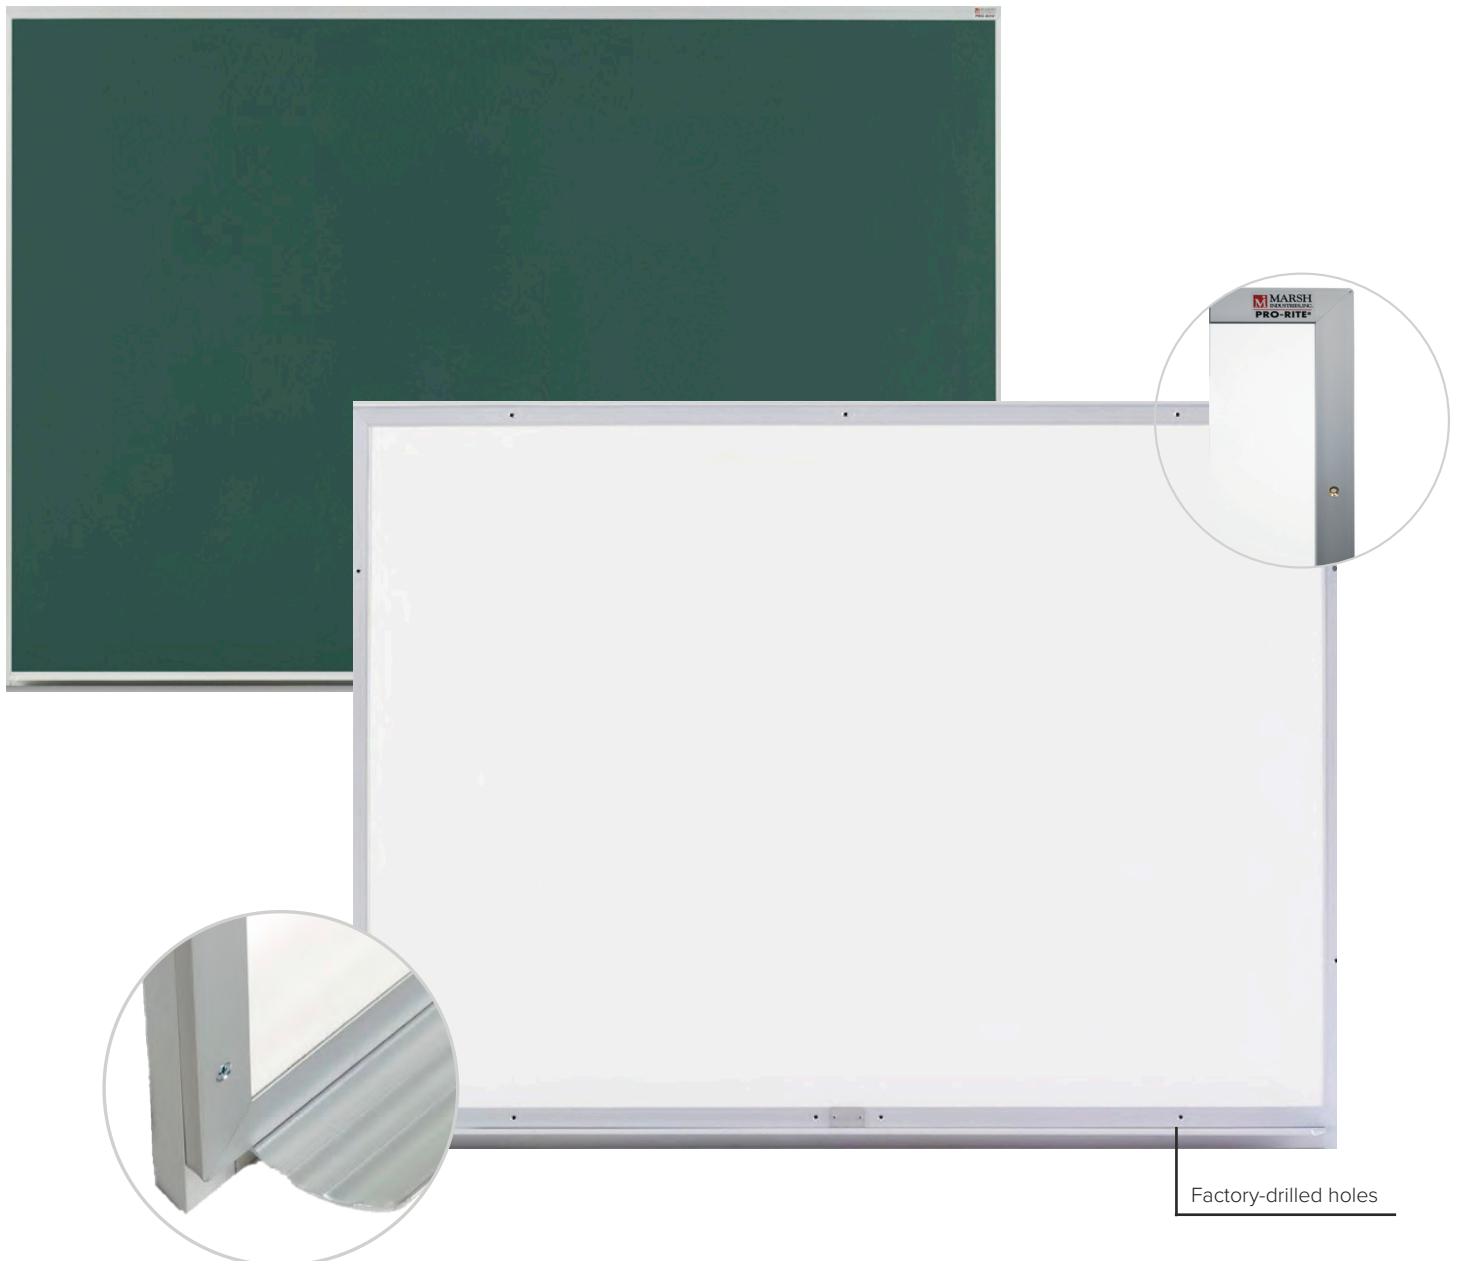

DETAILS

- Magnetic porcelain enameled steel surface
- 1" aluminum trim face
- 1/4" MDF with mylar backer
- Factory drilled counter sunk holes
- To determine height, measure from the top of the existing board to the top of the existing tray
- To determine width, measure from the outside edge of the left side of existing board to the outside edge of the right side

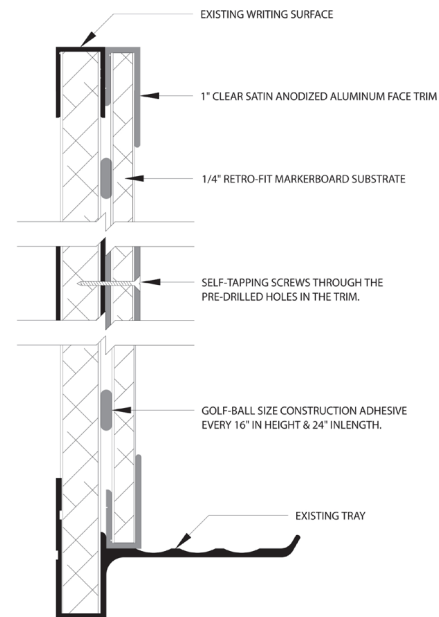

INSTALLATION



Prepare the surface of the existing board by thoroughly cleaning it of dirt, dust, or grease. Apply construction adhesive to the surface of the existing board in golf-ball size amounts every 16" in height and every 24" in length.



Position the new board carefully over existing board, and press firmly in the locations of the adhesive.



Install the self-tapping screws (supplied with the board) through the pre-drilled holes in the trim. Clean the board thoroughly before using. See markerboard care and maintenance instructions.

Size (h x w)	Weight	Item #
up to 4' 3/8"	37 lbs	RF-404
4' 1/2" to 6' 3/8"	57 lbs	RF-406
6' 1/2" to 8' 3/8"	74 lbs	RF-408
8' 1/2" to 10' 3/8"	99 lbs	RF-410
10' 1/2" to 12' 3/8"	129 lbs	RF-412
12' 1/2" to 16' 3/8"	161 lbs	RF-416

- All Pro-Rite products ship freight
- See page 49 for color options
- See a complete installation video at marsh-ind.com or on YouTube at [youtube.com/watch?v=fWqWeVQy5ZQ](https://www.youtube.com/watch?v=fWqWeVQy5ZQ)